


SHUT DOWN PROCEDURES:

1. Remove the static mixer from the dispense valve.

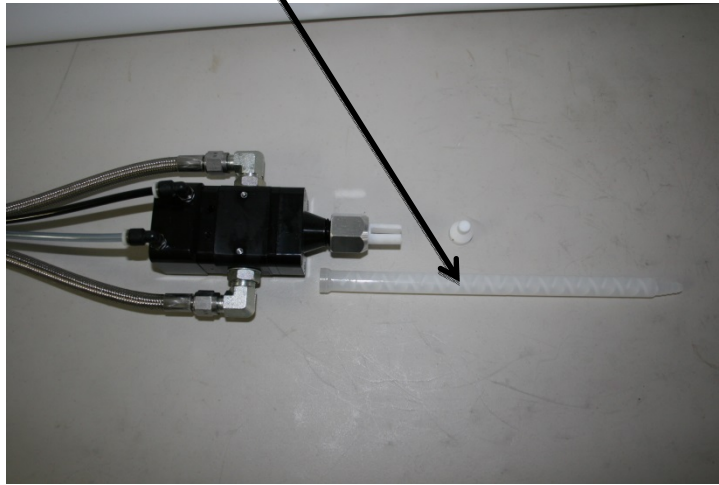

2. Trigger the system and run 2-3 sec. to purge any (A) material that might have migrated into the (B) port and any (B) that might have migrated into the (A) port.
3. Wipe away any material remaining around the (A) and (B) ports.
4. Apply a small amount of Vaseline or silicone based grease around the ports.
5. Install the Night Cap and secure with the hex nut.

